


HOT IN RUN & START

UNDER HOOD  
FUSE-RELAY  
CENTER




NOTE:  
FUEL INJECTORS  
ARE LOCATED IN  
CENTRAL SFI, CENTER  
OF INTAKE MANIFOLD

K7 ENG-1  
MINI FUSE  
20A

H7 ECM-1  
MINI FUSE  
20A

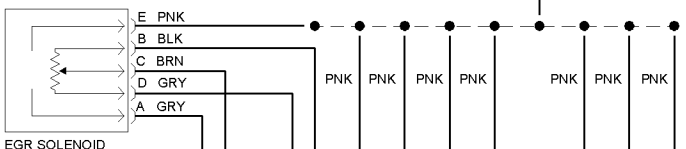

- 1 PNK
- 2 PNK
- 3 PNK
- 4 PNK
- 5 PNK
- 6 PNK
- 7 PNK
- 8 TAN/BLK
- 9 GRY
- 10 PPL
- 11 WHT
- 12 TAN
- 13 WHT
- 14 BLK
- 15 YEL/BLK
- 16 DK BLU/WHT
- 17 LT GRN
- 18 BRN
- 19 YEL
- 20 BRN
- 21 LT GRN/BLK
- 22 RED/BLK
- 23 BLK/WHT
- 24 YEL/BLK
- 25 YEL/BLK
- 26 LT BLU/BLK
- 27 PNK/BLK
- 28 LT GRN
- 29 TAN
- 30 YEL
- 31 DK BLU
- 32 PNK
- 33 BLK

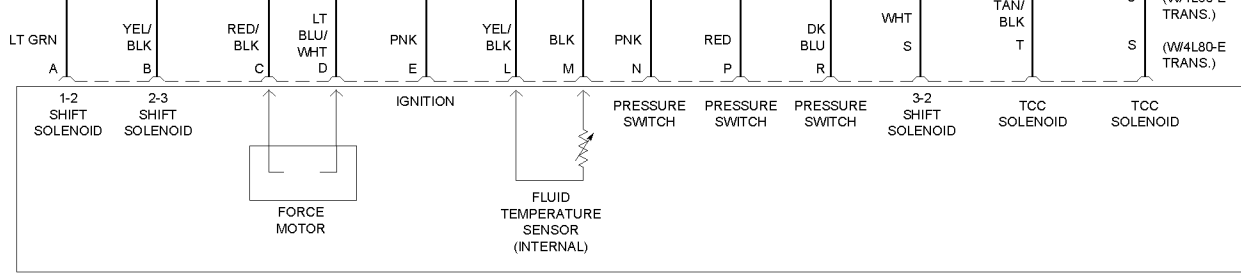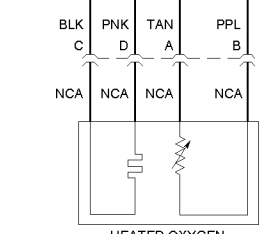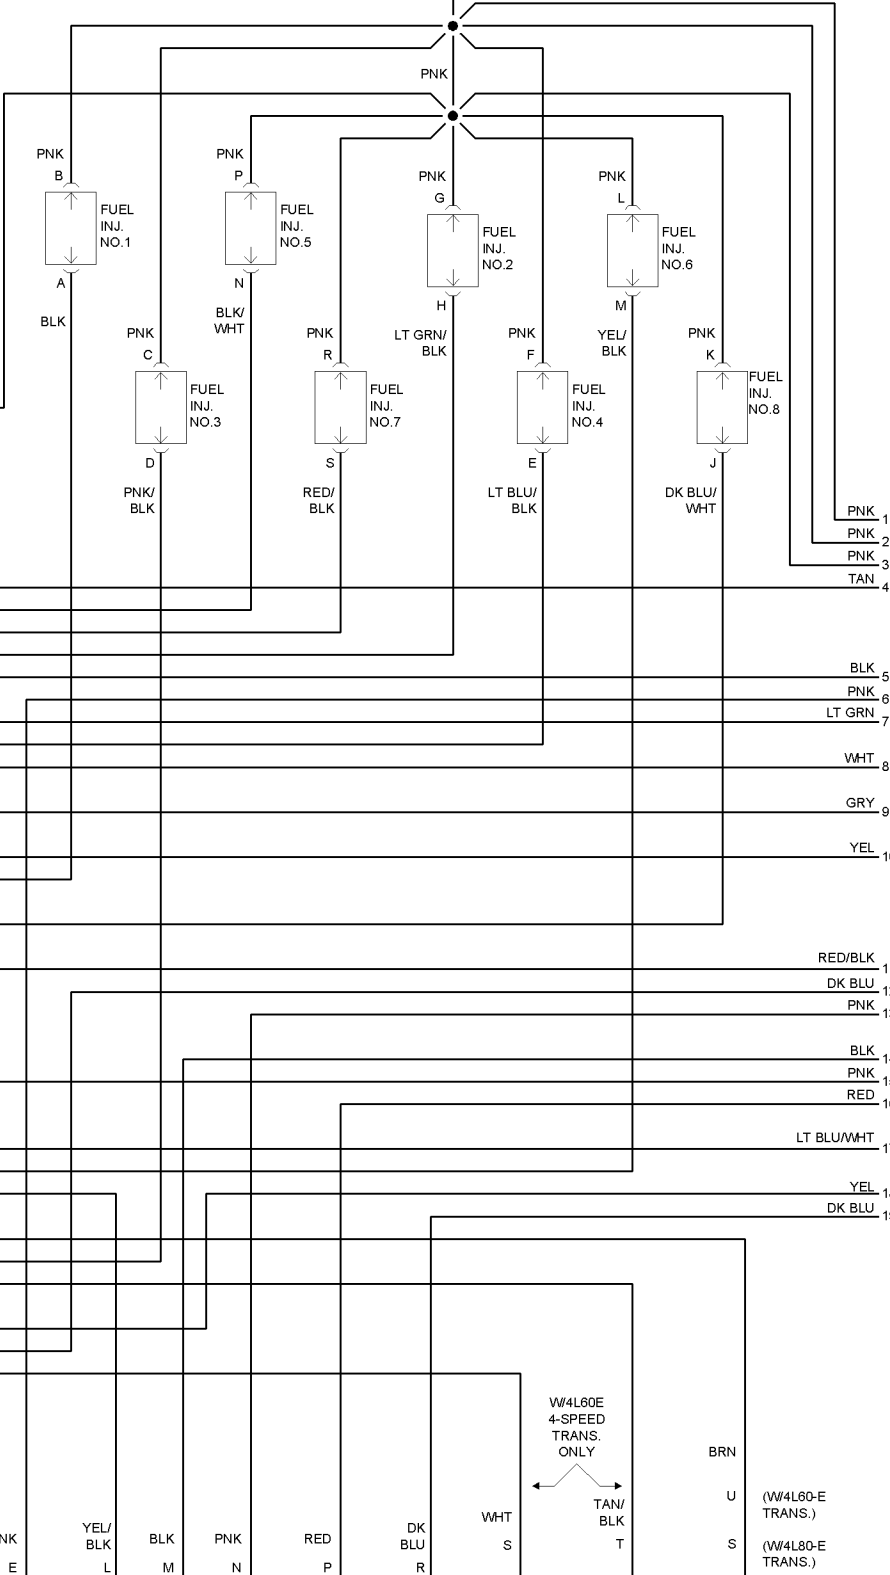

AUTOMATIC TRANSMISSION