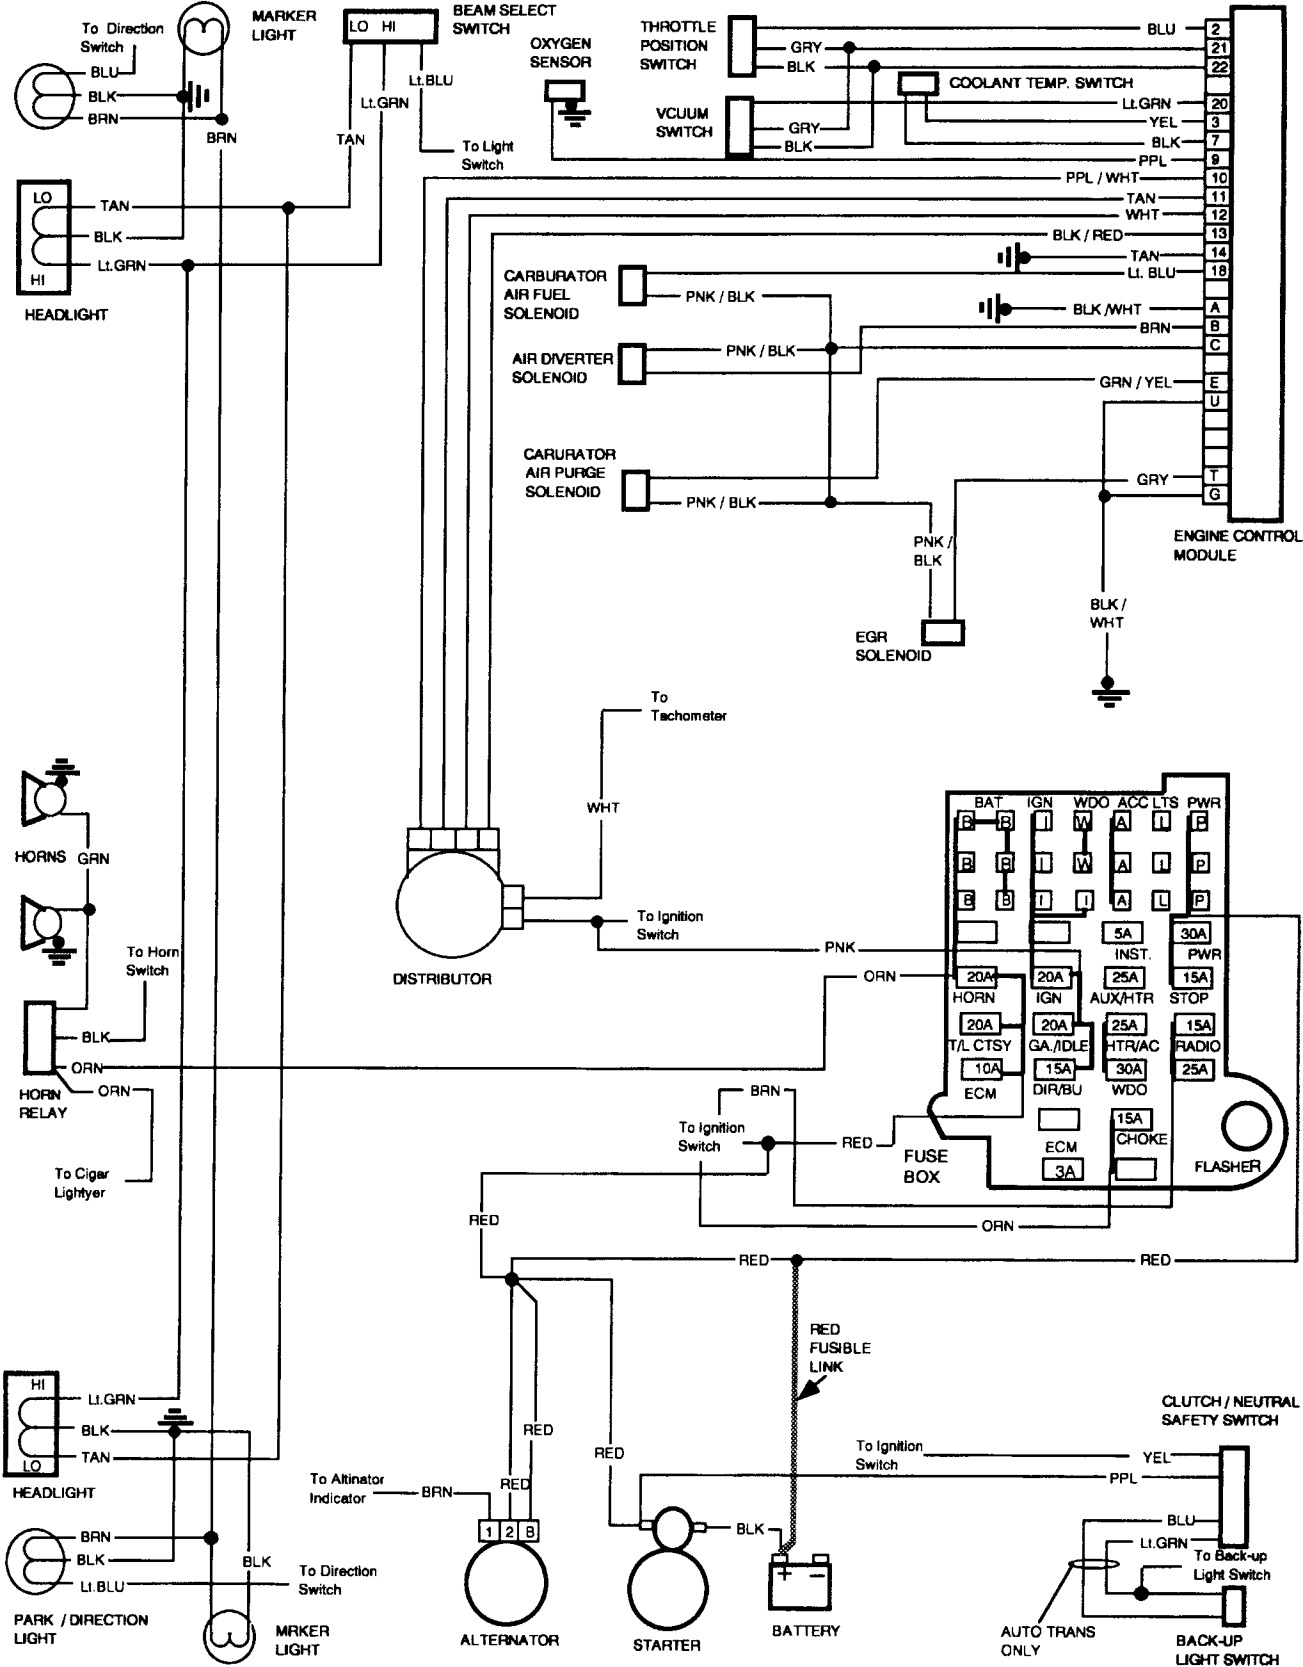
To Direction Switch
MARKER LIGHT
BEAM SELECT SWITCH
LO HI
OXYGEN SENSOR
THROTTLE POSITION SWITCH
COOLANT TEMP. SWITCH
VCUUM SWITCH
BLU
BLK
BRN
Lt.BLU
Lt.GRN
TAN
To Light Switch
GRY
YEL
PPL
PPL / WHT
WHT
BLK / RED
Lt. BLU
BLK /WHT
GRN / YEL
GRY
HEADLIGHT
CARBURATOR AIR FUEL SOLENOID
PNK / BLK
AIR DIVERTER SOLENOID
CARURATOR AIR PURGE SOLENOID
ENGINE CONTROL MODULE
PNK / BLK
EGR SOLENOID
BLK / WHT
To Tachometer
WHT
To Ignition Switch
PNK
DISTRIBUTOR
HORNS
GRN
To Horn Switch
ORN
HORN RELAY
To Cigar Lightyer
BAT IGN WDO ACC LTS PWR
5A INST.
30A PWR
20A HORN
20A IGN
25A AUX/HTR
15A STOP
20A T/L CTSY
20A GA./IDLE
25A HTR/AC
15A RADIO
10A ECM
15A DIR/BU
30A WDO
25A
15A CHOKE
ECM 3A
FUSE BOX
FLASHER
RED
RED FUSIBLE LINK
CLUTCH / NEUTRAL SAFETY SWITCH
To Altinator Indicator
To Back-up Light Switch
PARK / DIRECTION LIGHT
ALTERNATOR
STARTER
BATTERY
AUTO TRANS ONLY
BACK-UP LIGHT SWITCH