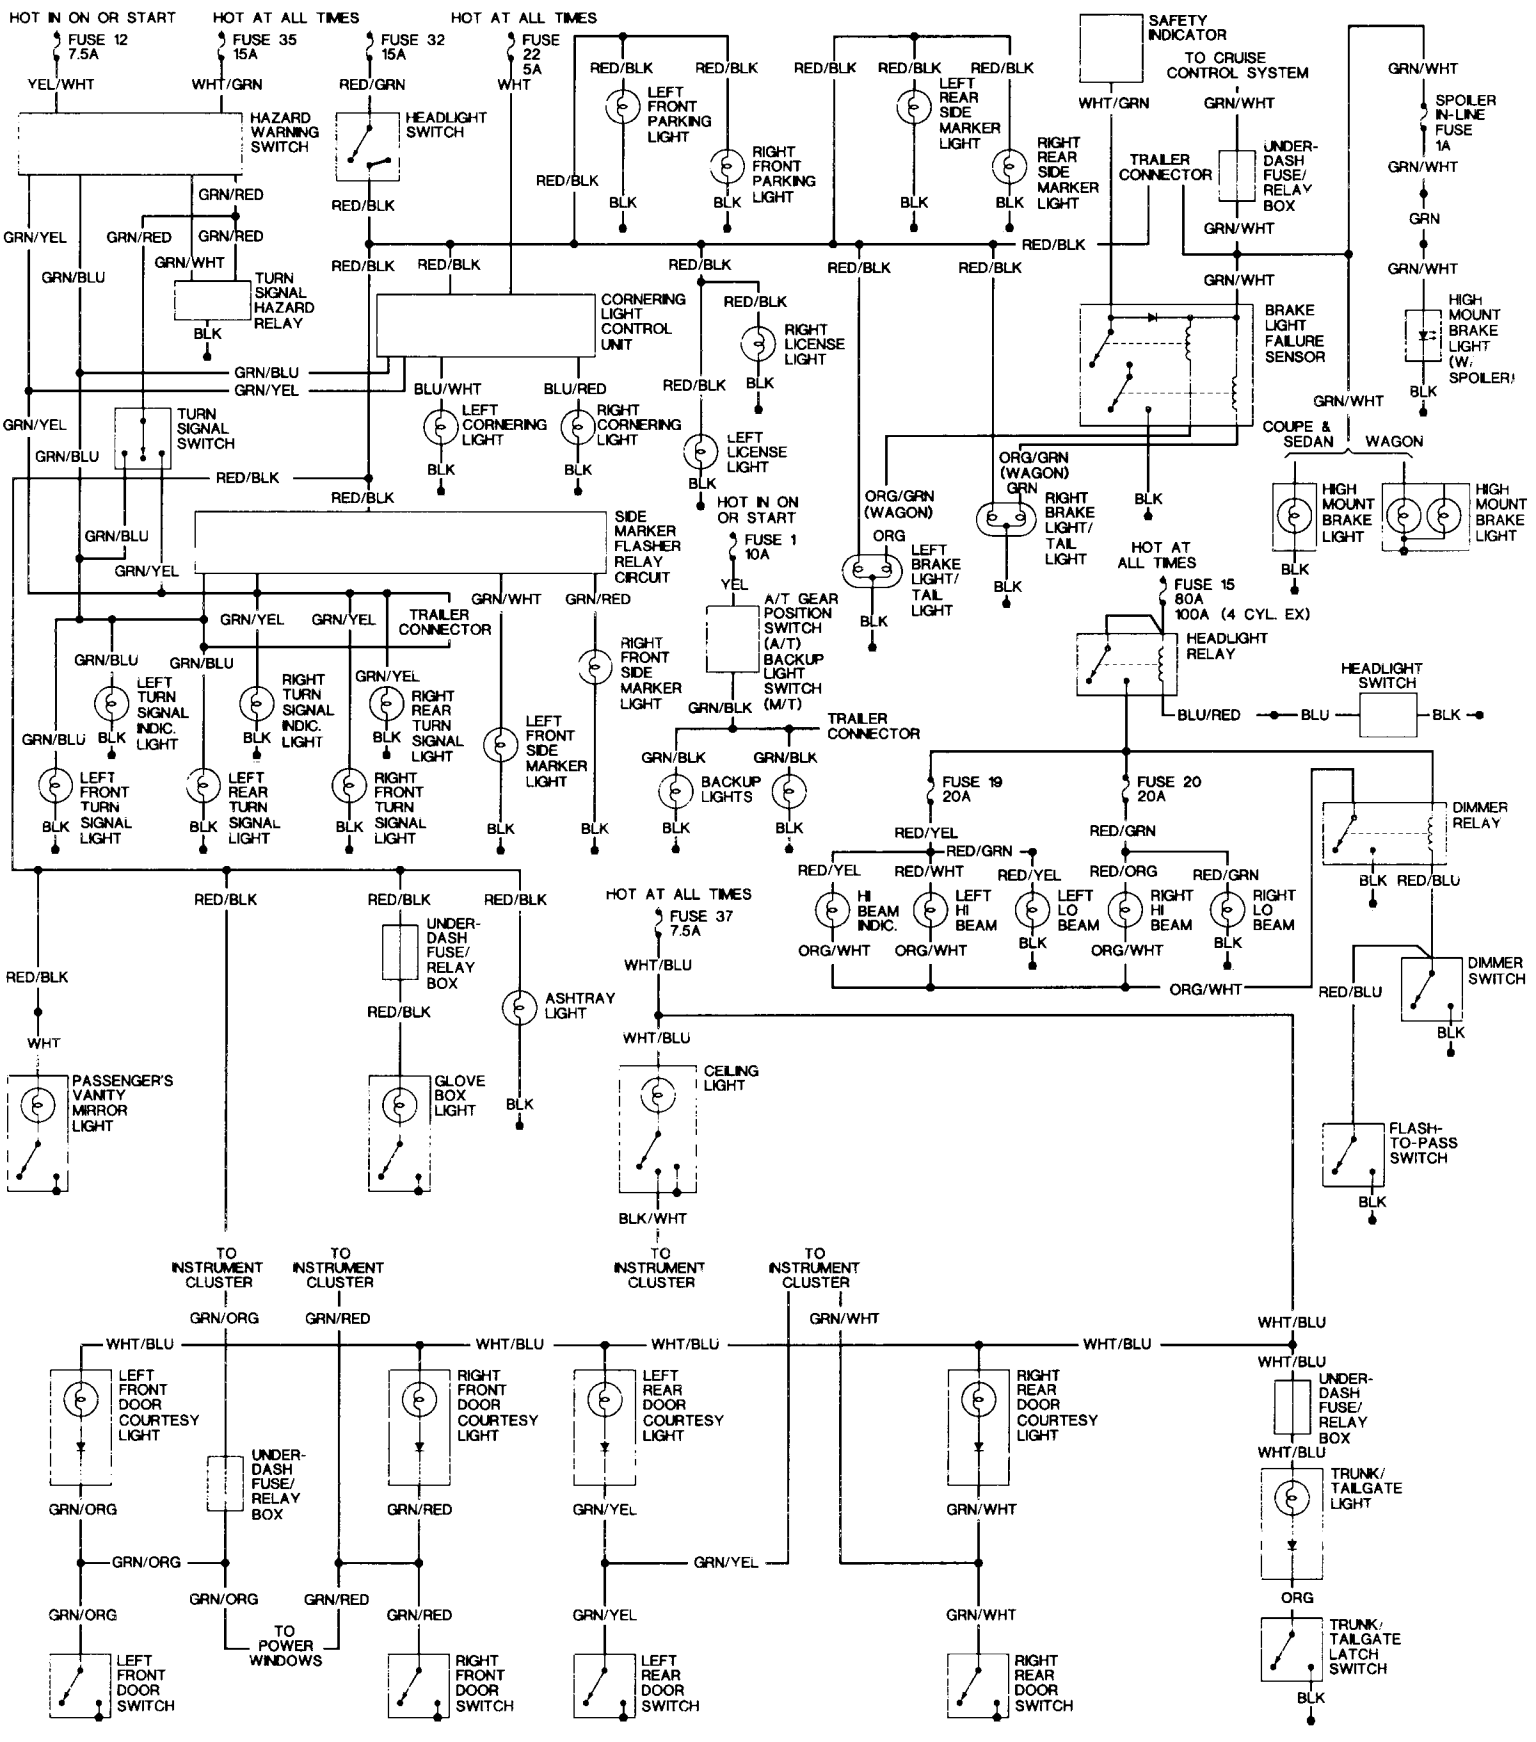
HOT IN ON OR START
FUSE 12 7.5A
YEL/WHT
HOT AT ALL TIMES
FUSE 35 15A
WHT/GRN
FUSE 32 15A
RED/GRN
HOT AT ALL TIMES
FUSE 22 5A
WHT
HAZARD WARNING SWITCH
HEADLIGHT SWITCH
GRN/RED
GRN/YEL
GRN/RED
GRN/WHT
GRN/BLU
TURN SIGNAL HAZARD RELAY
BLK
RED/BLK
LEFT FRONT PARKING LIGHT
RIGHT FRONT PARKING LIGHT
LEFT REAR SIDE MARKER LIGHT
RIGHT REAR SIDE MARKER LIGHT
SAFETY INDICATOR
TO CRUISE CONTROL SYSTEM
WHT/GRN
GRN/WHT
TRAILER CONNECTOR
UNDER-DASH FUSE/ RELAY BOX
SPOILER IN-LINE FUSE 1A
GRN
CORNERING LIGHT CONTROL UNIT
RIGHT LICENSE LIGHT
BRAKE LIGHT FAILURE SENSOR
HIGH MOUNT BRAKE LIGHT (W/ SPOILER)
BLU/WHT
BLU/RED
LEFT CORNERING LIGHT
RIGHT CORNERING LIGHT
TURN SIGNAL SWITCH
LEFT LICENSE LIGHT
COUPE & SEDAN
WAGON
HOT IN ON OR START
FUSE 1 10A
YEL
ORG/GRN (WAGON)
ORG
LEFT BRAKE LIGHT/ TAIL LIGHT
ORG/GRN (WAGON)
GRN
RIGHT BRAKE LIGHT/ TAIL LIGHT
HIGH MOUNT BRAKE LIGHT
HIGH MOUNT BRAKE LIGHT
SIDE MARKER FLASHER RELAY CIRCUIT
A/T GEAR POSITION SWITCH (A/T) BACKUP LIGHT SWITCH (M/T)
HOT AT ALL TIMES
FUSE 15 80A 100A (4 CYL. EX)
HEADLIGHT RELAY
HEADLIGHT SWITCH
BLU
TRAILER CONNECTOR
RIGHT FRONT SIDE MARKER LIGHT
LEFT TURN SIGNAL INDIC. LIGHT
RIGHT TURN SIGNAL INDIC. LIGHT
RIGHT REAR TURN SIGNAL LIGHT
LEFT FRONT SIDE MARKER LIGHT
BACKUP LIGHTS
FUSE 19 20A
FUSE 20 20A
DIMMER RELAY
LEFT FRONT TURN SIGNAL LIGHT
LEFT REAR TURN SIGNAL LIGHT
RIGHT FRONT TURN SIGNAL LIGHT
RED/YEL
RED/GRN
RED/WHT
RED/ORG
HI BEAM INDIC.
LEFT HI BEAM
LEFT LO BEAM
RIGHT HI BEAM
RIGHT LO BEAM
ORG/WHT
DIMMER SWITCH
UNDER-DASH FUSE/ RELAY BOX
ASHTRAY LIGHT
HOT AT ALL TIMES
FUSE 37 7.5A
WHT/BLU
PASSENGER'S VANITY MIRROR LIGHT
GLOVE BOX LIGHT
CEILING LIGHT
FLASH-TO-PASS SWITCH
BLK/WHT
TO INSTRUMENT CLUSTER
GRN/ORG
GRN/RED
GRN/WHT
GRN/YEL
LEFT FRONT DOOR COURTESY LIGHT
RIGHT FRONT DOOR COURTESY LIGHT
LEFT REAR DOOR COURTESY LIGHT
RIGHT REAR DOOR COURTESY LIGHT
UNDER-DASH FUSE/ RELAY BOX
TRUNK/ TAILGATE LIGHT
TO POWER WINDOWS
LEFT FRONT DOOR SWITCH
RIGHT FRONT DOOR SWITCH
LEFT REAR DOOR SWITCH
RIGHT REAR DOOR SWITCH
TRUNK/ TAILGATE LATCH SWITCH